


# INSTALLATION INSTRUCTION

MODEL:CTSHF7500CH+CTSH7500CHRP  
CTSHF7500BL+CTSHF7500BLRP

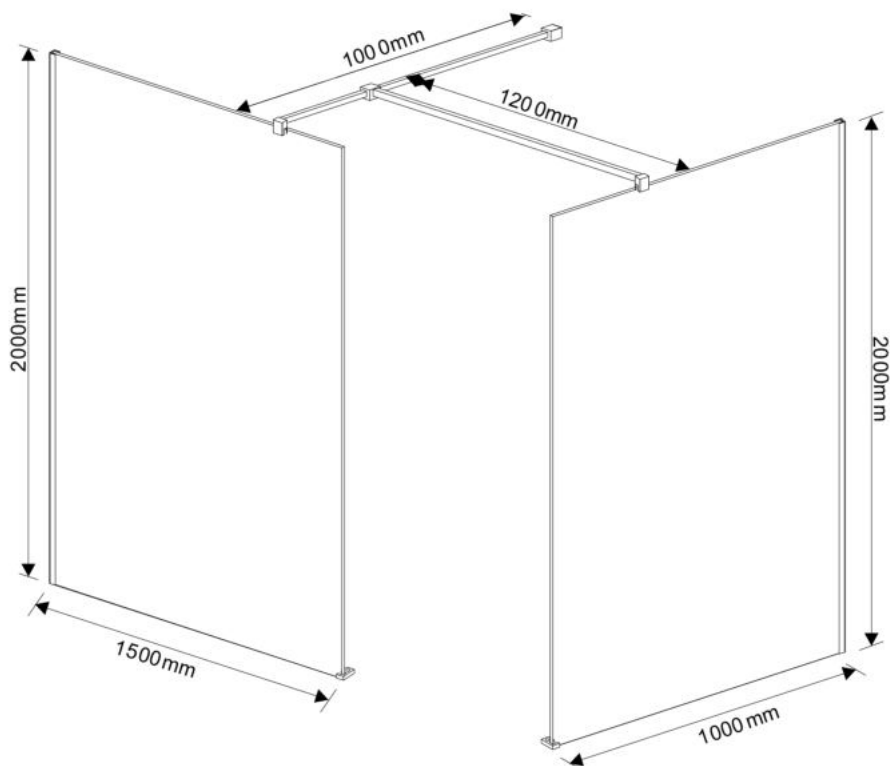

**IMPORTANT:** Ensure the side of the shower screen with Nano Tech coating is facing the inside of your shower.


# Tools used during installation

Spirit level 

Electric drille 

Measuring tape 

Star screwdriver 


Rubber hammer 

Star screwdriver 







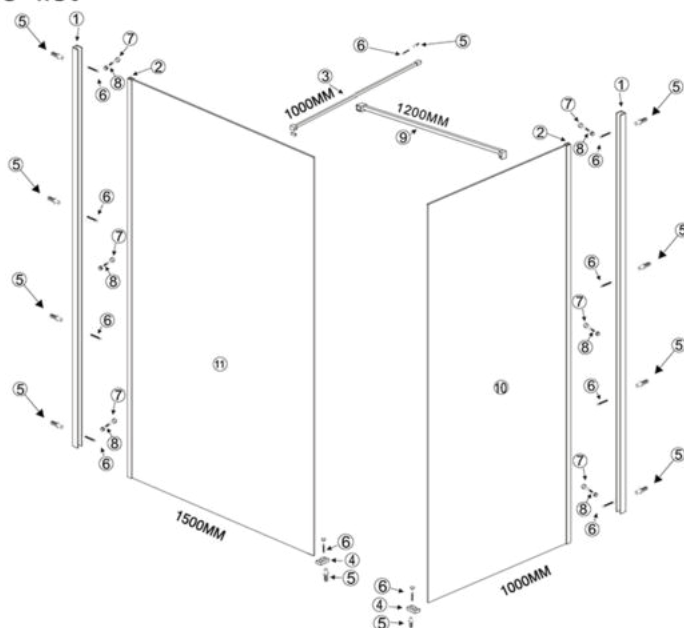


Pencil 

Silicone sealer 










## Accessories list





CTSHF7500CH or CTSHF7500BL including




 ① X1	 ② X1	 ③ X1	 ④ X1	 ⑤ X6	 ⑥ ST4X30 X6	 ⑦ X3
 ⑧ ST4X14 X3	 ⑪ GLASS PANEL X1					

CTSH7500CHRP or CTSHF7500BLRP, is sold separately, it is an optional extra, including

 ① X1	 ② X1	 ④ X1	 ⑤ X5	 ⑥ ST4X30 X5	 ⑦ X3	 ⑧ ST4X14 X3
 ⑨ X1	 ⑩ GLASS PANEL X1					

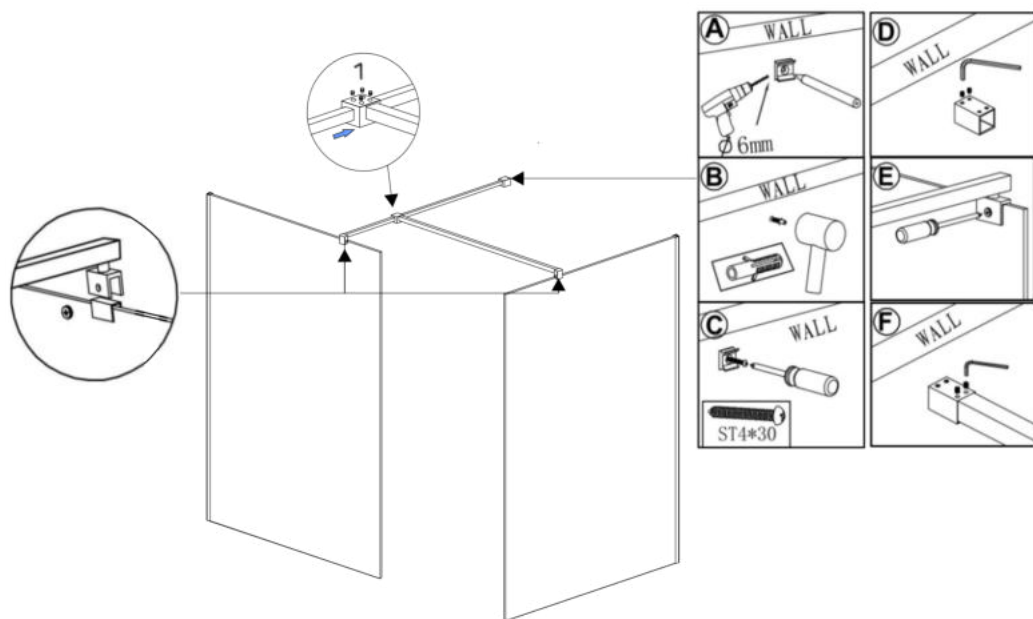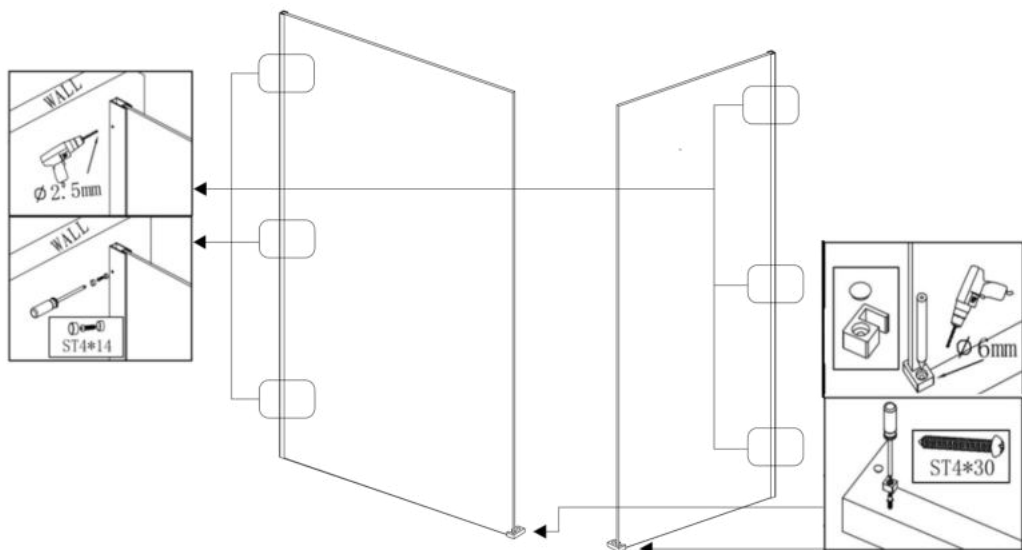

IMPORTANT: Ensure the side of the shower screen with Nano Tech coating is facing the inside of your shower.

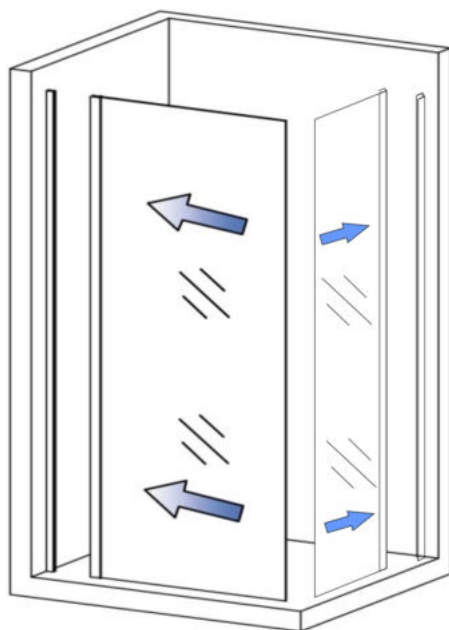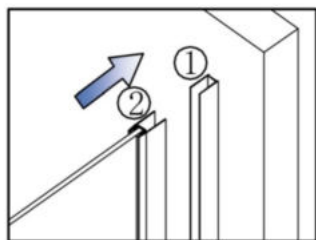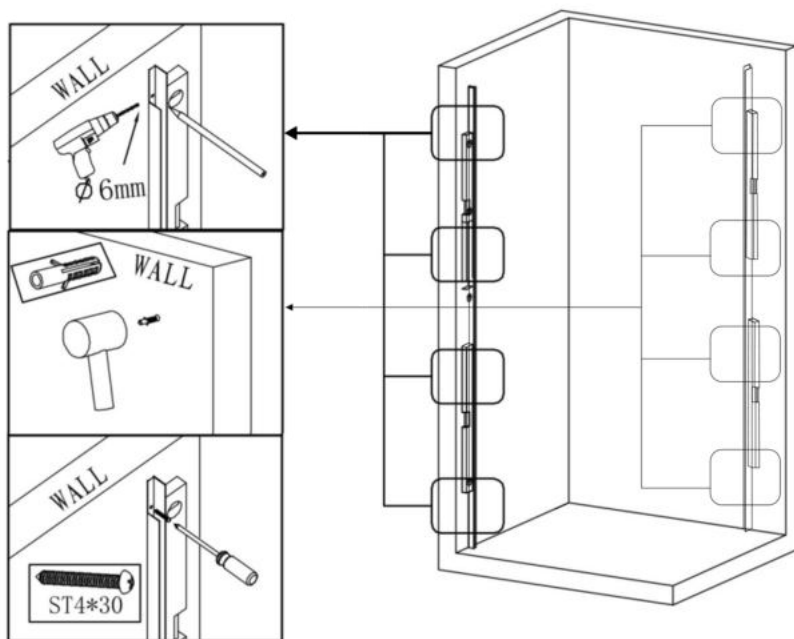

**IMPORTANT:** Ensure the side of the shower screen with Nano Tech coating is facing the inside of your shower.